





Torch-on Built up Felt Roofing Systems with Insurance Backed Guarantee Warm Roof (incorporating insulation)

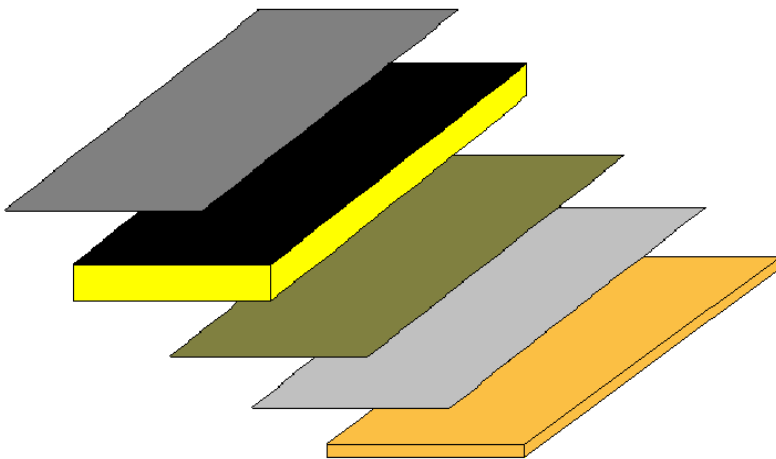


- Cap Sheet**
20 year
15 year
10 year
Scudoelast P4 mineral
Deltaelast mineral
Betagum mineral
- Detailing Underlay**
Betagum P3
- Insulation
Vapour Barrier
Safety Layer**
Scudothem PU/VV
Scudovapor 4
Scudobase (nailed)
- Substrate**
Plywood

- Cap Sheet**
20 year
Scudogarden 4 mineral
- Underlay
Detailing Underlay**
Scudogarden 3
Scudogarden 3
- Insulation
Vapour Barrier
Safety Layer**
Scudothem PU/VV
Scudovapor 4
Scudobase (nailed)
- Substrate**
Plywood

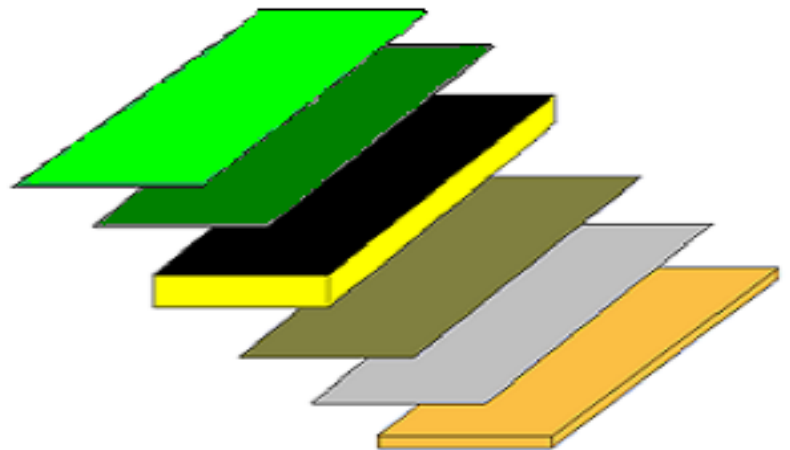

- Cap Sheet**
20 year
15 year
10 year
Scutumplast mineral
Gammplast mineral
Tropical mineral
- Detailing Underlay**
Tropical 3
- Insulation
Vapour Barrier**
Scudothem PU/VV
Scudovapor 4
- Substrate**
Concrete

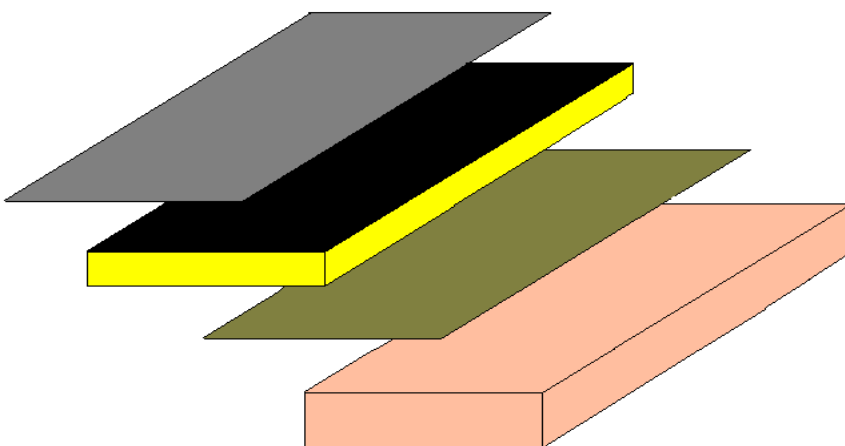


For all detail works: The vapour barrier must be dressed up the detail before the Scudothem PU/VV is installed. The Detailing Underlay must be used in conjunction with the selected cap sheet for all detail works above the Scudothem PU/VV.

All substrates must be primed with **Verprim Primer** before installing the roofing system.

Insurance backed guarantee only available when the roofing system is installed by an Approved Contractor of EDS Roofing Supplies (Midlands) Limited




**Torch-on Built up Felt Roofing Systems with Insurance Backed Guarantee
Cold Roof (not incorporating insulation)**

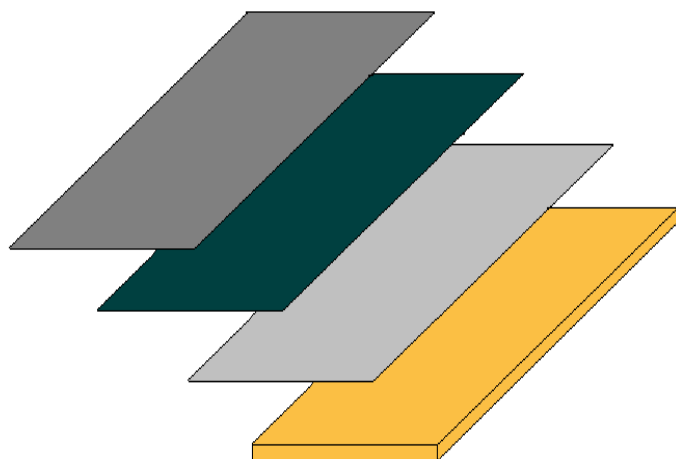


Cap Sheet	Scudoelast P4 mineral Deltaelast mineral Betagum mineral
20 year	
15 year	
10 year	
Underlay	Betagum P3
Detailing Underlay	Betagum P3
Safety Layer	Scudobase (nailed)
Substrate	Plywood

Cap Sheet	Scudogarden 4 mineral
20 year	
Underlay	Scudogarden 3
Detailing Underlay	Scudogarden 3
Safety Layer	Scudobase (nailed)
Substrate	Plywood

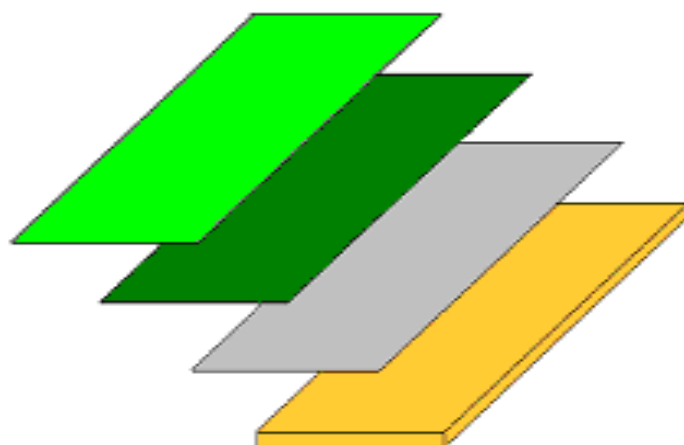

Cap Sheet	Scutumplast mineral Gammplast mineral Tropical mineral
20 year	
15 year	
10 year	
Underlay	Tropical 3
Detailing Underlay	Tropical 3
Isolating Layer	Perfoplast
Substrate	Concrete

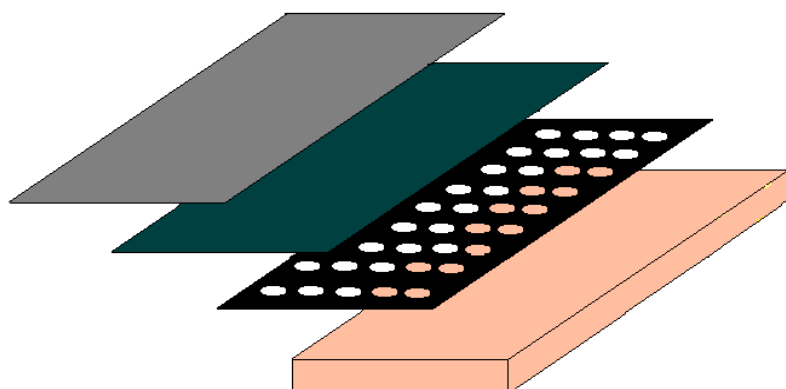

For all detail works: The Detailing Underlay must be used in conjunction with the selected cap sheet for all detail works above the Scudotherm PU/VV.
All substrates must be primed with **Verprim Primer** before installing the roofing system.

Insurance backed guarantee only available when the roofing system is installed by an Approved Contractor of EDS Roofing Supplies (Midlands) Limited